


808 KIT AND 808A KIT INSTRUCTIONS

(USED IN ADDITION TO REGULAR ELECTRIC I-92 AND I-44 INSTRUCTION MANUAL)
FOR USE IN SPREADING GRANULAR MATERIALS

INSTRUCTIONS FOR INSTALLING WIDTH-CONTROL KIT 808 AND 808A:

1. When spreading 8-16 Granular Material, the teeth must be removed from seed gate. As shown in Figure A, or feeding will be uneven. This is not necessary when spreading 20-40 or 40-60 granular material.
2. To remove seed gate, place broadcaster upside down on hopper, with motor up. Loosen two 1/4" capscrews that hold pivot plate to base. Remove opening stop under gauge by removing 1/4" wing nut and bolt. Rock pivot plate to center and pull out the seed gate. Remove the three center teeth from the seed gate by grinding or cutting. **DO NOT REMOVE** two outer teeth, see figure A.
3. Replace seed gate by reversing above procedure.
4. See Figure A-1. Remove agitator collar assembly and replace with 5/16" collar. Collar should have pressure on spring to keep material from escaping under washer. This agitator **MUST** be removed for spreading granular material! Replace when spreading seed.
5. See figure B and B-1. To install 517 blocking plate, loosen two 1/4" capscrews holding pivot plate to base. Turn broadcaster back over, with hopper up. Slide 517 plate between base and pivot plate and over four screws that extend through pivot plate, making sure opening is in correct position, as shown in figure B-1. Tighten two 1/4" capscrews.
6. See figure B-2. Snap perforated guard in bottom of hopper. Guard 817 with 5/16" holes is to be used with 8-16 granular material and guard 773 with 3/16" holes is to be used when spreading finer material. No screen is used for seeds or fertilizer.
7. When broadcaster is to be used for spreading an all-over pattern, follow instructions in regular I-92 and I-44 instruction booklet.

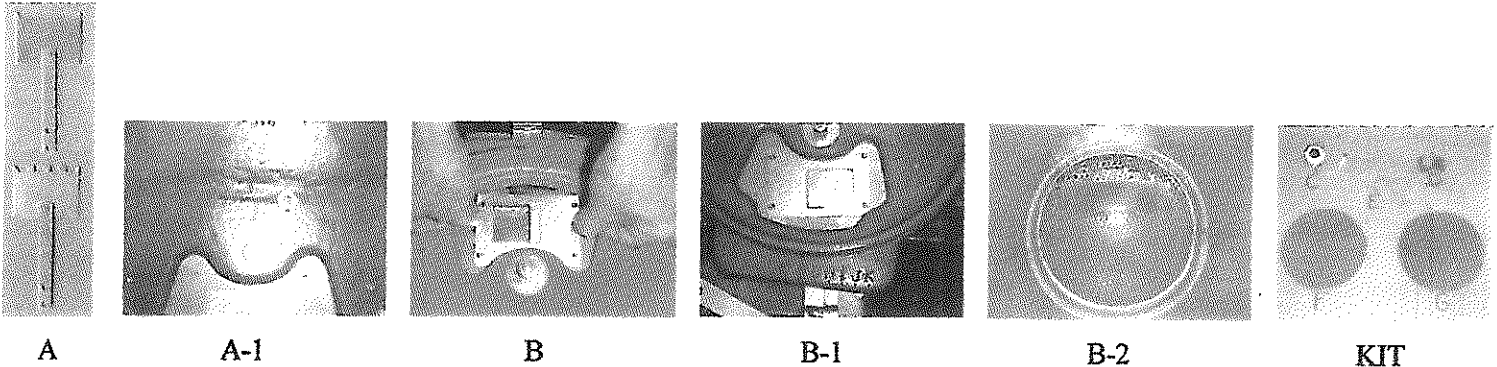

PARTS FOR 808 AND 808A WIDTH-CONTROL KITS:

<u>KEY NO.</u>	<u>PART NO.</u>	<u>NAME</u>	<u>NUMBER NEEDED</u>
	808A	Kit complete for 8-16 mesh granules, including the following:	
		One each 813, 517, 598 and 817.....	1
	808	Kit complete for finer mesh granules, including the following:	
		One each 813, 517, 598 and 773.....	1
C	813	Rheostat with bracket and knob.....	1
D	517	Blocking Plate.....	1
E	598	Collar 5/16".....	1
F	817	Perforated screen guard with 5/16" holes.....	1
G	773	Perforated screen guard with 3/16" holes.....	1

Herd Seeder Co., Inc.
2383 South U. S. 35, Logansport, IN 46947
Phone: 574-753-6311 Fax: 574-722-4106
www.herdseeder.com info@herdseeder.com